

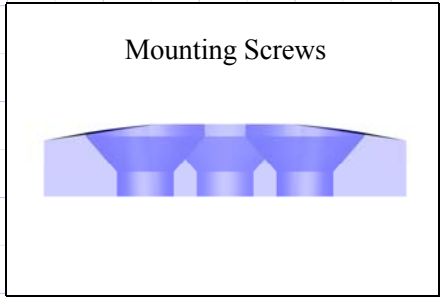


# Fin Frame Bars

Note that the four corner mounting holes should be drilled and countersunk before the bars are rounded. Fin screw holes should be drilled after rounding.

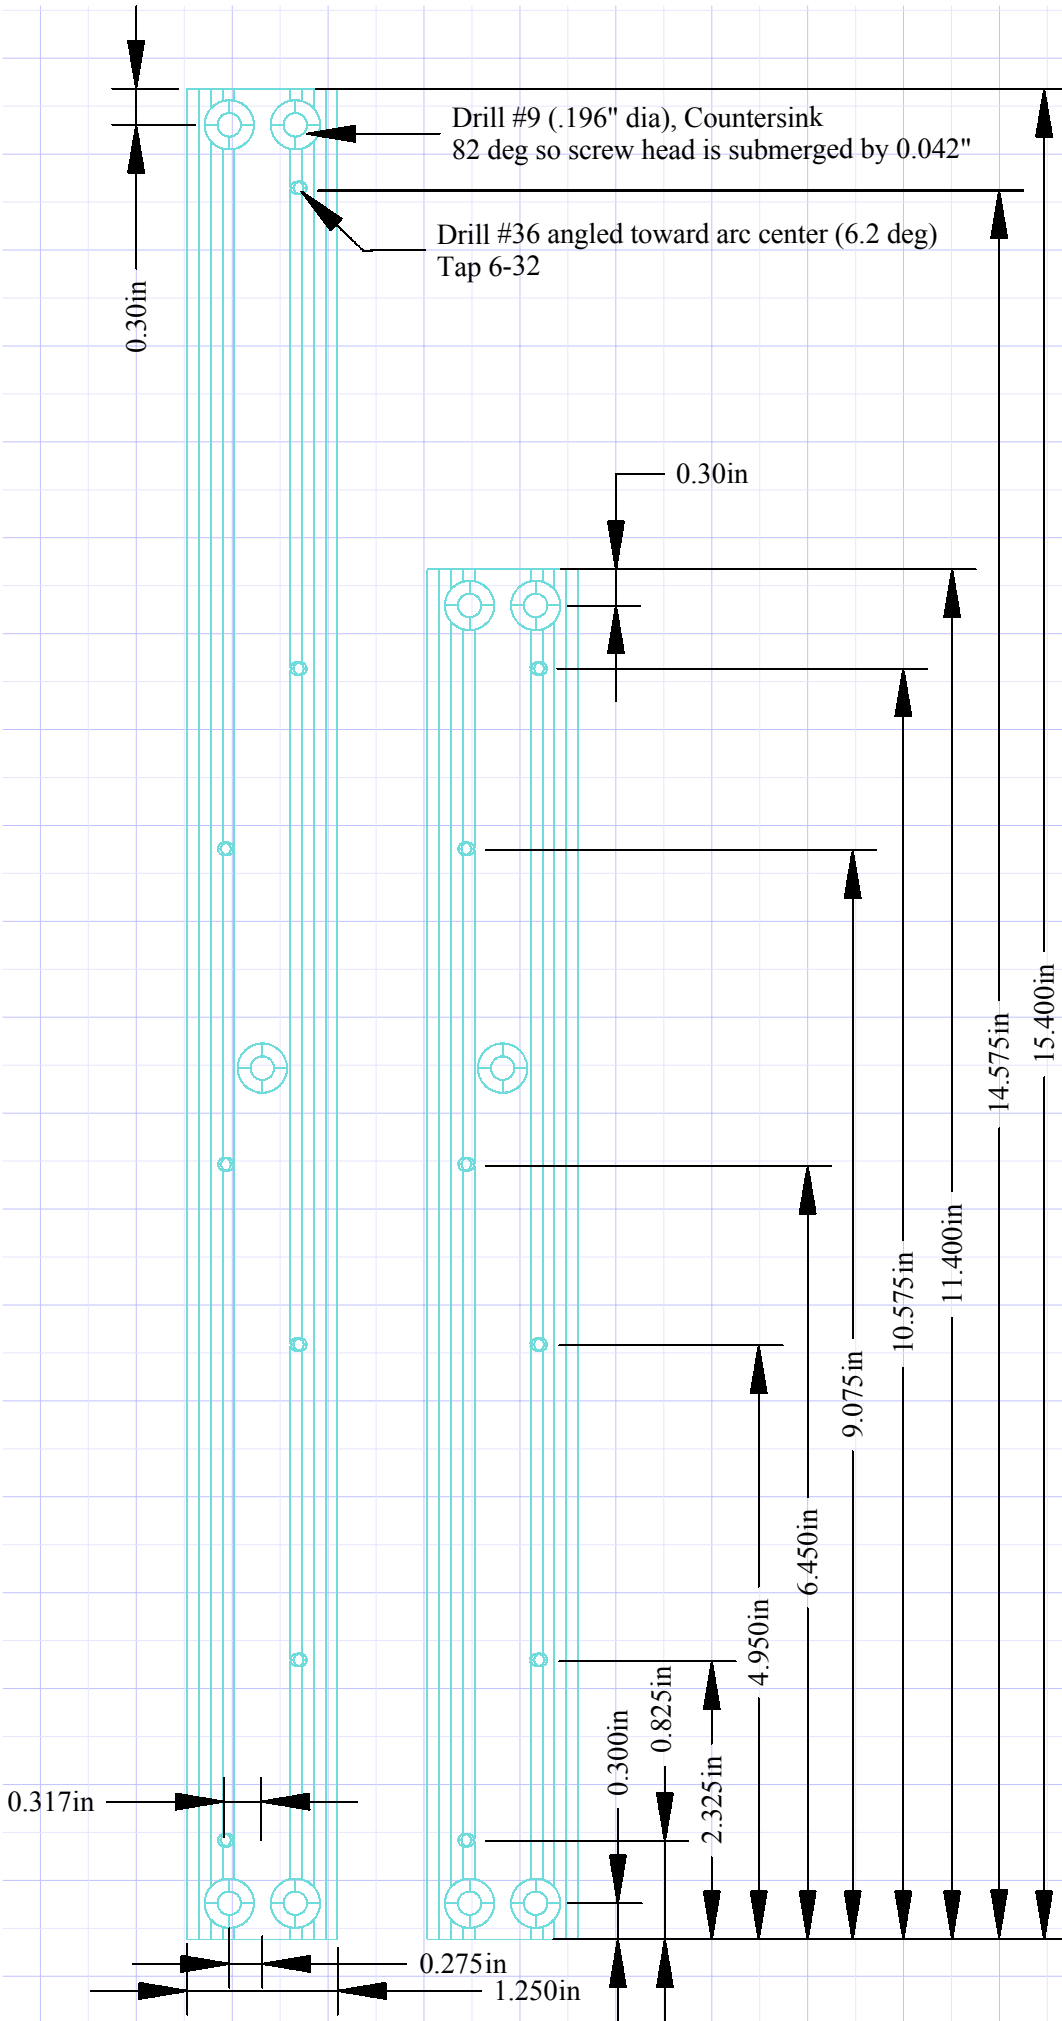

Bar stock is 1/4" x 1-1/4" They are turned to a 3.016" radius. Center thickness remains 1/4".

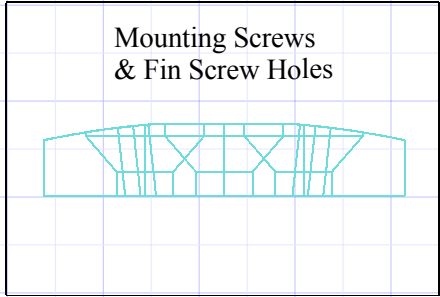

Bottom corners of bars connected to Sustainer Aft Centering Rings must be chamfered 1/8" from corners.

