






REVISIONS

ZONE	REV	DESCRIPTION	DATE	APPROVED
------	-----	-------------	------	----------

Ext Fin Can V2.1 Step 4

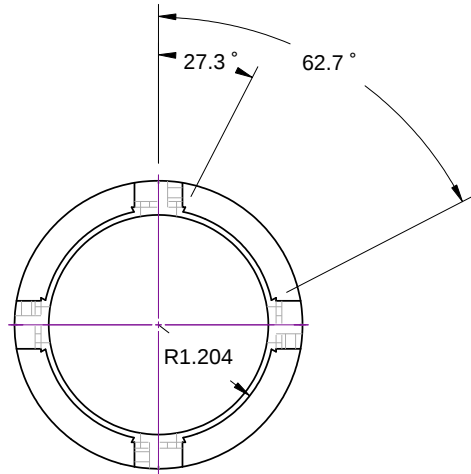

- 1) Using 5/8" end mill, create a pocket.
(X=0, Y=0, A=27.3) to (X=-.088, A=62.7);
No tool offset. Z moves from 1.308" to 1.204".
- 2) Replicate with 90_, 180_, and 270_ offsets on A.

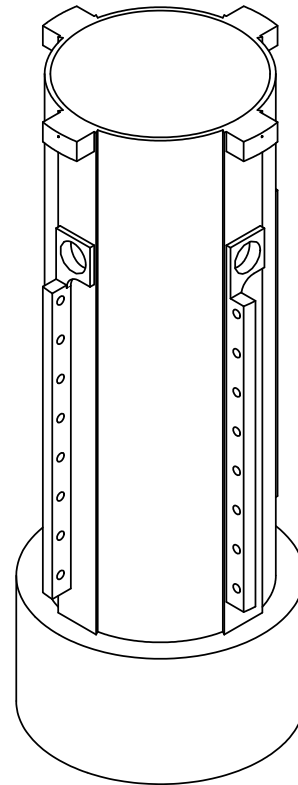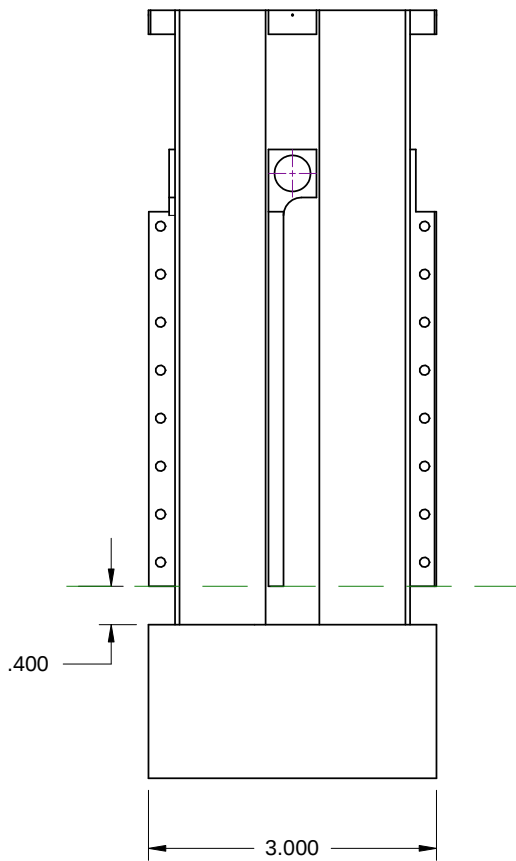

SIZE A	FSCM NO.	DWG NO.	REV
SCALE	B. Feretich	SHEET	

